



TA 3040

Håltagningsmått för ovanliggande montage och planmontage

Asennusaukon mittakuva upotukselle sekä huullosasennukselle


Plass størrelse for ovenfor montering og flat montering

Hole measurements for top and flush mount

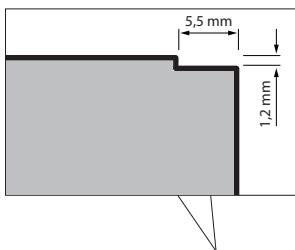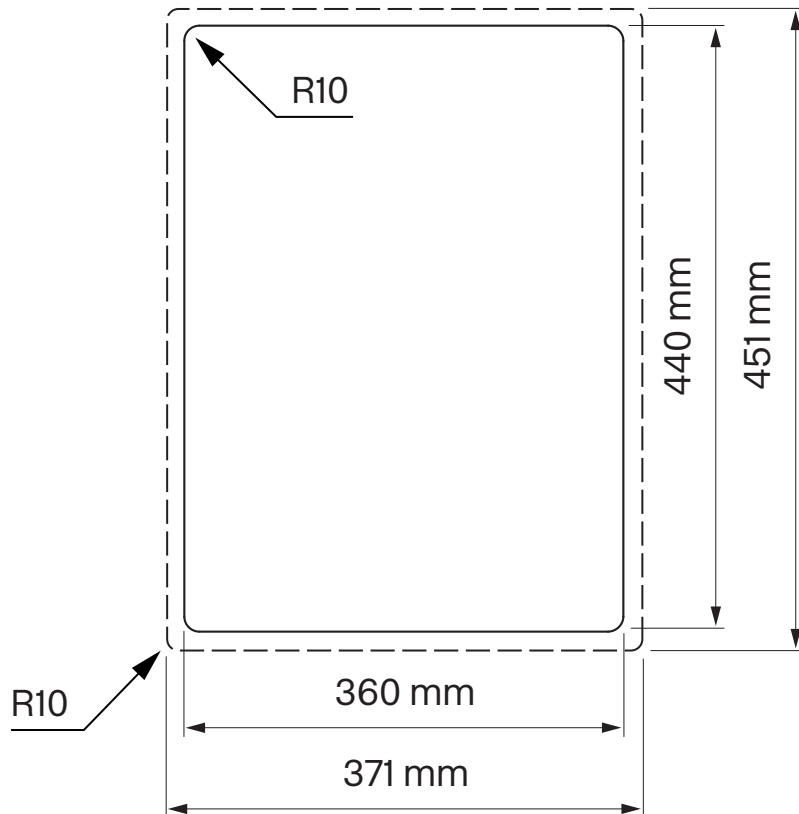

————— Håltagning bänkskiva ovanliggande montage/planmontage
Prege benk øvre monterings/plan montering
Asennusaukko upotukseen
Countertop cut out for top mount/flush mount

- - - - - Urfräsning vid planmontage (5,5 mm bred, 1,2 mm djup)
Utgravingen av festeplanet (5,5 mm brede, 1,2 mm dype)
Huullosasennuksen tason jyräisyys (5,5 mm leveä, 1,2 mm syvä)
Recess for flush mount (5.5 mm wide, 1.2 mm deep)

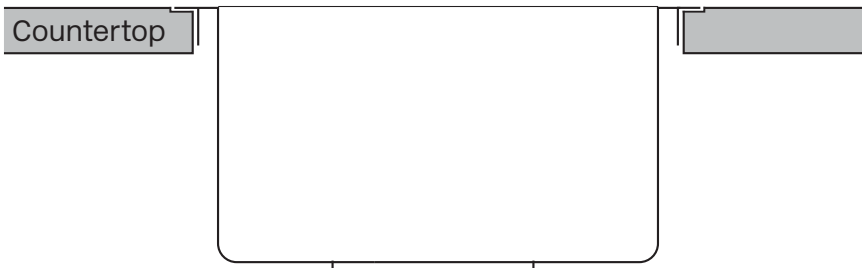

Tapwell



TA 3040

Håltagningsmått för
undermontage (underlimning)

Asennusaukon mittakuva
alta-asennukselle (altaliimaus)

Plass størrelsen av
sammenstillingen (ved liming)

Hole measurements
for under mount

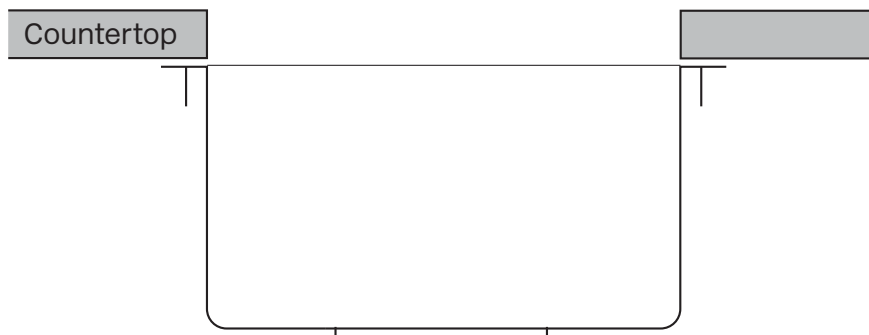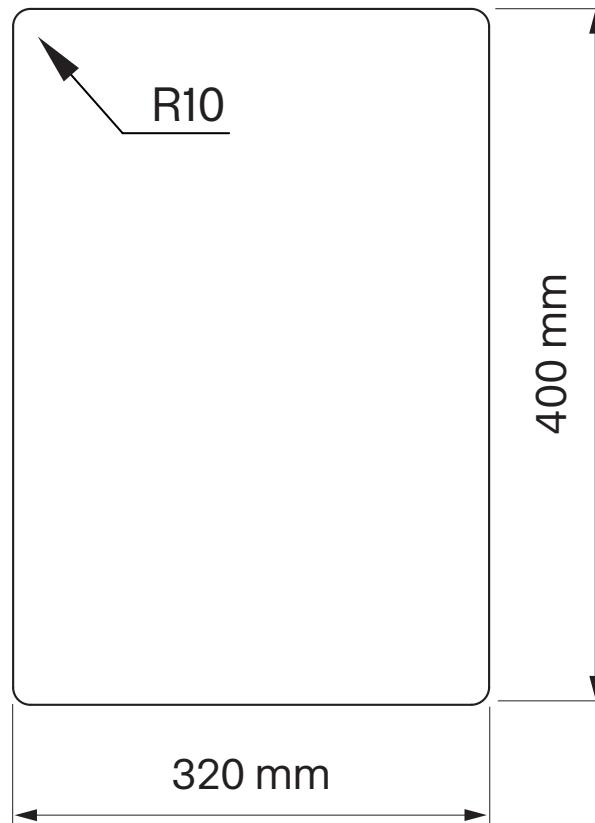

Tapwell