



# TA 5040

Håltagningsmått för  
undermontage (underlimning)

Plass størrelsen av  
sammenstillingen (ved liming)

Tilaa koko kokoonpanon  
(liimauksen aikana)

Hole measurements  
for under mount

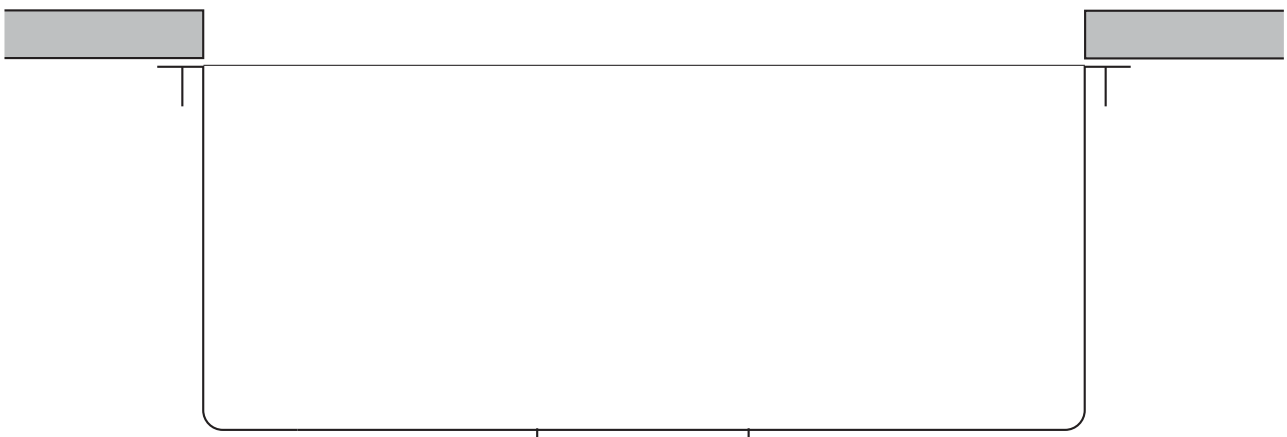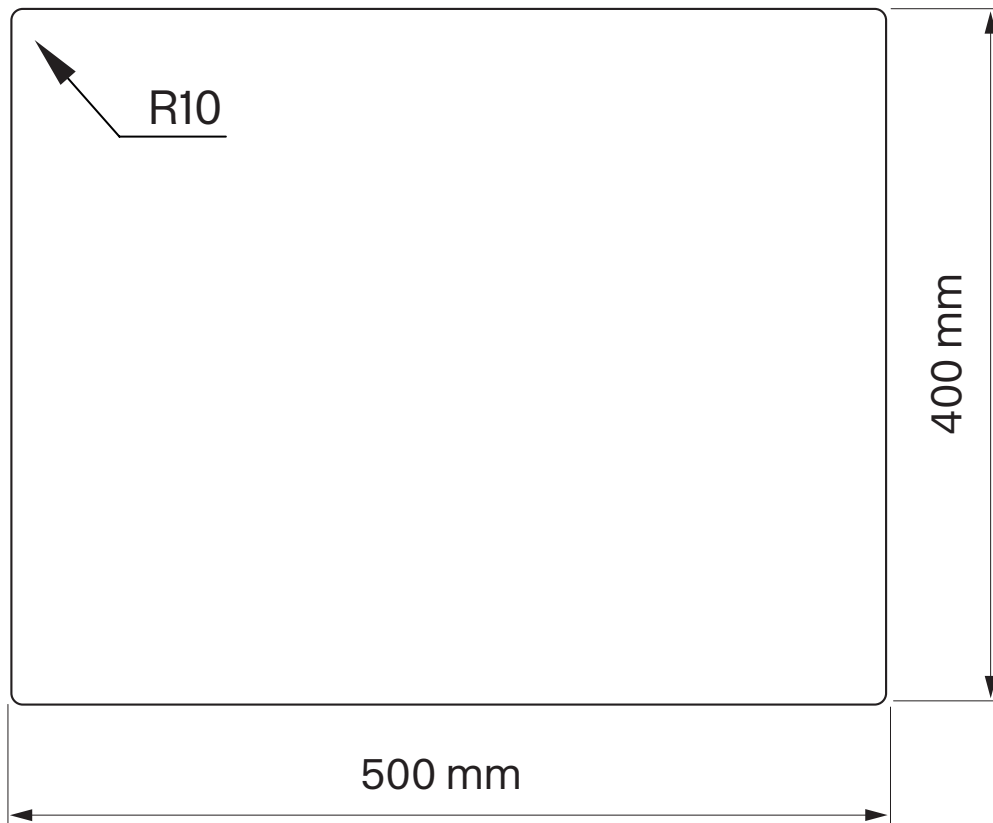



# TA 5040

Håltagningsmått för ovanliggande montage och planmontage

Tilaa koko tasainen asennukseen ja edellä asennus

Plass størrelse for ovenfor montering og flat montering

Hole measurements for top and flush mount

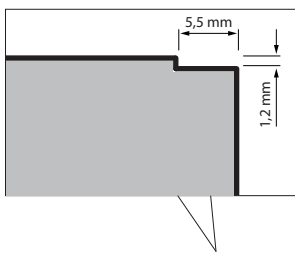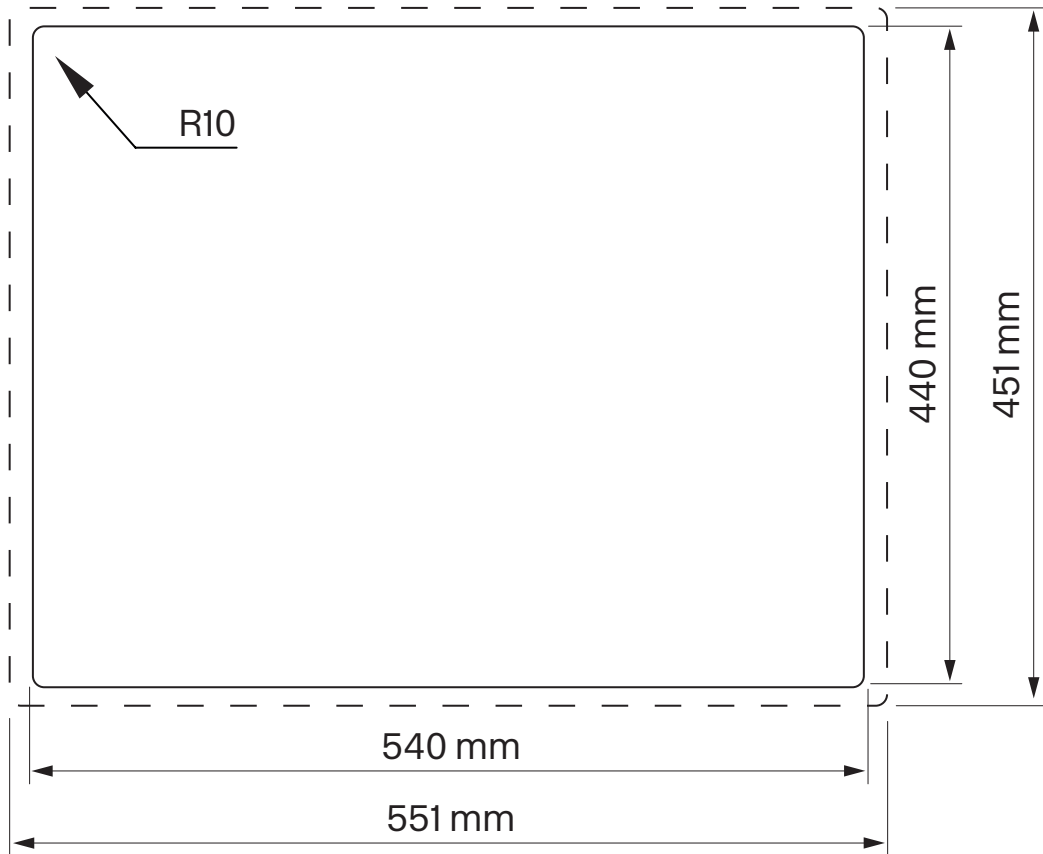

- Håltagning bänkskiva ovanliggande montage/planmontage  
Prege benk øvre monterings/plan montering  
Lävistys penkki yläkiinnityslevyn/kone kokoonpano  
Countertop cut out for top mount/flush mount
- - - - - Urfräsning vid planmontage (5,5 mm bred, 1,2 mm djup)  
Utgravingen av festeplanet (5,5 mm brede, 1,2 mm dype)  
Karkea-plane asennus (5,5 mm leveä, 1,2 mm syvä)  
Recess for flush mount (5.5 mm wide, 1.2 mm deep)

