



TA 7040

Håltagningsmått för ovanliggande montage och planmontage


Asennusaukon mittakuva upotukselle sekä huullosasennukselle

Plass størrelse for ovenfor montering og flat montering

Hole measurements for top and flush mount

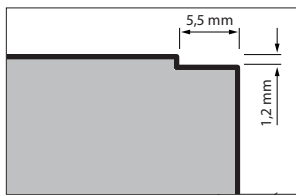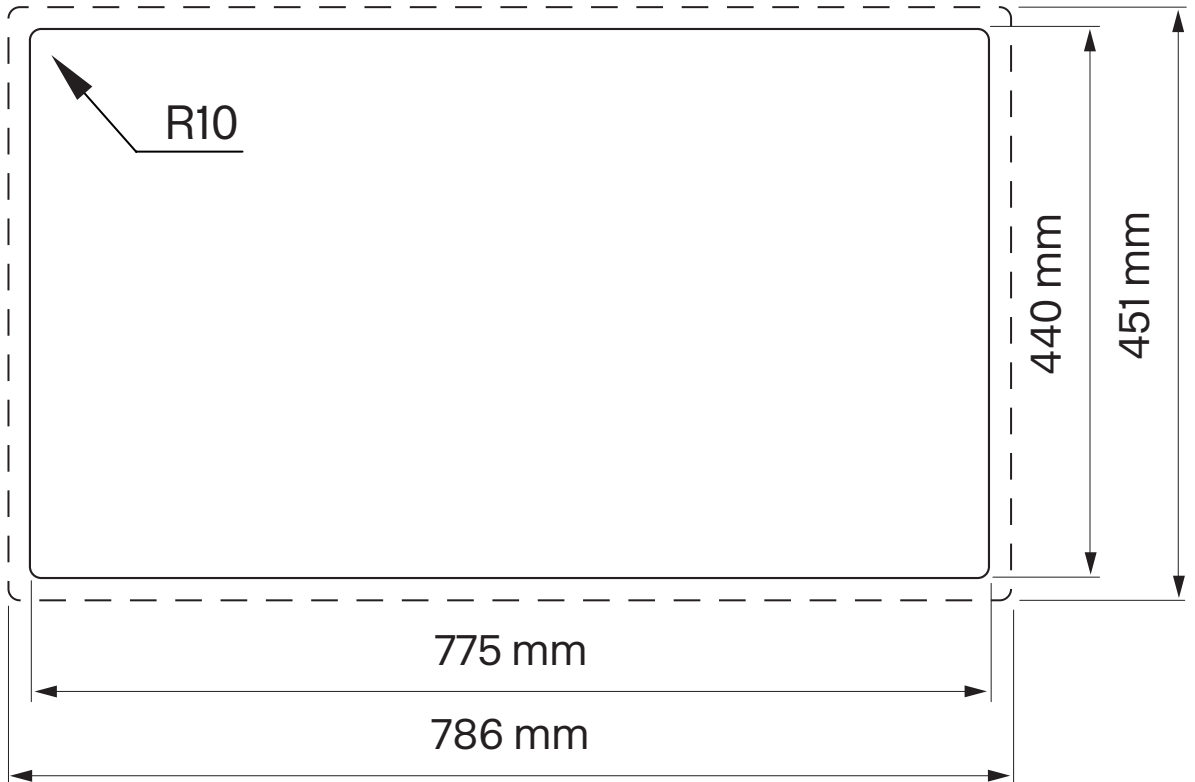

- Håltagning bänkskiva ovanliggande montage/planmontage
Prege benk øvre monterings/plan montering
Asennusaukko upotukseen
Countertop cut out for top mount/flush mount
- - - - - Urfräsning vid planmontage (5,5 mm bred, 1,2 mm djup)
Utgravingen av festeplanet (5,5 mm brede, 1,2 mm dype)
Karkea-plane asennus (5,5 mm leveä, 1,2 mm syvä)
Recess for flush mount (5.5 mm wide, 1.2 mm deep)

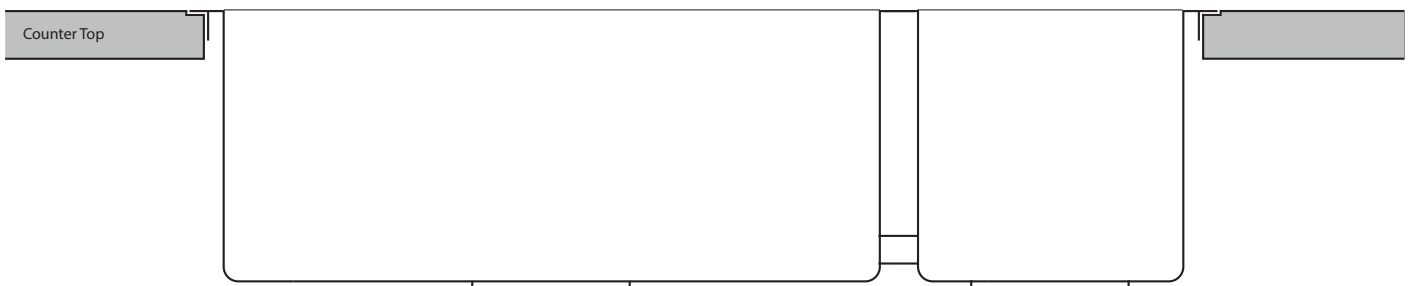

TA 7040

Håltagningsmått för
undermontage (underlimning)

Asennusaukon mittakuva
alta-asennukselle (altaliimaus)

Plass størrelsen av
sammenstillingen (ved liming)

Hole measurements
for under mount

